



DIGITAL MILK THERMOMETER



Operating Instructions

INSTRUMENT OPERATION - POWER ON AND OFF INSTRUCTIONS:


1. To power ON the Digital Milk thermometer, simply press the "SET" button for about 1 second.
2. To power OFF the Digital Milk thermometer, again simply press and hold the "SET" button for about 3 seconds. Alternatively, to perform a reset you can press and hold the "SET" and "+" buttons for 3 seconds.
3. Auto power-OFF: When the temperature is lower than 50 °C/122 °F with no obvious temperature change and if there is no button press for about 5 minutes the unit will power off automatically. If the temperature shown is above 50 °C/122 °F then the thermometer will remain on.

INSTRUCTIONS FOR USE:

1. Press "SET" for 1 second to turn on the Digital Milk thermometer.
2. Press the "SET" button again to select the preset temperature (60 °C/140 °F, 65 °C/149 °F or 70 °C/158 °F) or set your own temperature in the User Set mode. Use the + or – buttons to adjust the temperature to any temperature of your choosing (e.g. 62 °C or 125 °F). Press "SET" to confirm the setting.
3. Insert the thermometer into the milk jug and milk. Fasten to the side of the jug with the supplied jug clip.
4. Start steaming your milk.
5. A beeper will sound for 60 seconds when the desired temperature is reached. Press any key to stop the beeper.
6. Press "SET" for 3 seconds to turn the thermometer off or it will also turn off automatically after 5 minutes if not in use.

BATTERY WARNING: KEEP OUT OF REACH OF CHILDREN.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

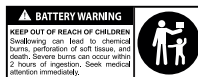

GUARANTEE - This instrument carries a one-year guarantee against defects in either components or workmanship. During this period, products that prove to be defective will, at the discretion of ETI, be either repaired or replaced without charge. The product guarantee does not cover damage caused by fair wear and tear, abnormal storage conditions, incorrect use, accidental misuse, abuse, neglect, misapplication or modification. Full details of liability are available within ETI's Terms & Conditions of Sale at etiltld.com. In line with our policy of continuous development, we reserve the right to amend our product specification without prior notice.

MODEL

130mm Stem in °C with green band and boot
130mm Stem in °C with red band and boot
130mm Stem in °C with blue band and boot
130mm Stem in °F with black band and yellow boot
175mm Stem in °C with green band and boot
175mm Stem in °C with red band and boot
175mm Stem in °C with blue band and boot
175mm Stem in °F with black band and yellow boot

PRODUCT CODE

810-873
810-874
810-875
810-850
810-883
810-884
810-885
810-860



Supplied by
Electronic Temperature Instruments Ltd
Worthing · West Sussex · BN14 8HQ
01903 202151 · sales@etiltd.com · etiltd.com

